






ASSEMBLY INSTRUCTIONS

MODEL : WM1762A-DC

IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST				PART LIST		
A	JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm		4PCS	1	RIGHT SIDE FRAME	1PC
				2	LEFT SIDE FRAME	1PC
B	JCBC M6 x 45mm + S/W M6 + F/W M6 x 13mm		4PCS	3	FRONT STRETCHER (LONG)	1PC
				4	BACK STRETCHER (SHORT)	1PC
C	ALLEN KEY M4		1PC	5	TOP REST	1PC
D	L BRACKET		4PCS	6	CUSHION SEAT	1PC
E	CSK SCREW M3.5 x 12mm		8PCS	STEP 2		


CAUTIONS :

(1) **DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**

(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)


(2) **KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.**

STEP 1

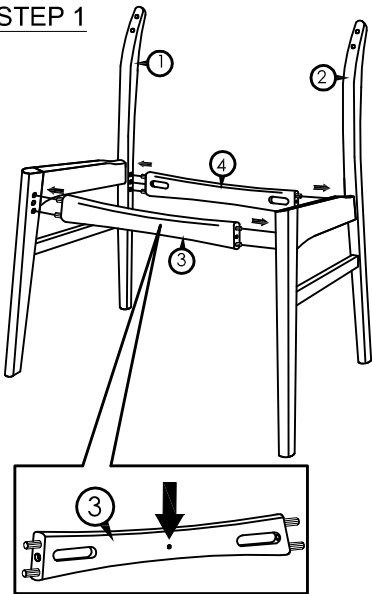


Front Stretcher has a small hole for identification.

STEP 2

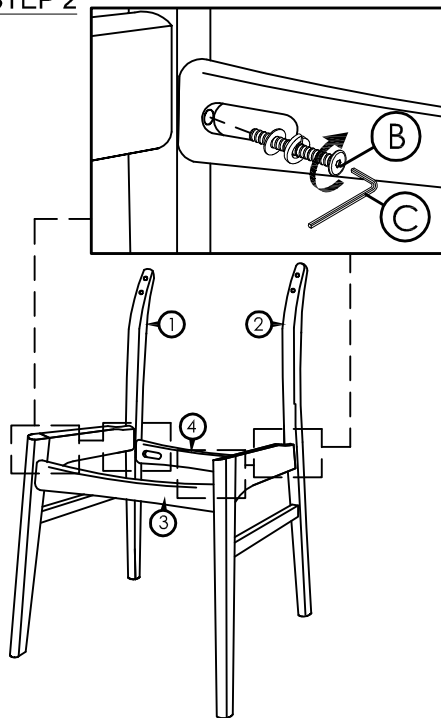


STEP 3

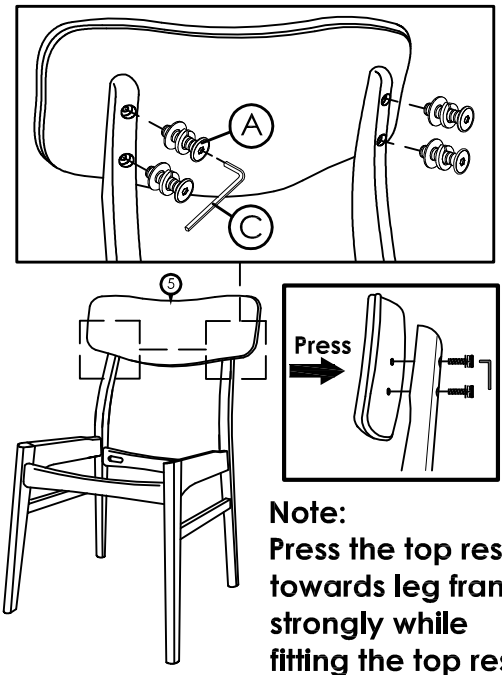


Note:
Press the top rest towards leg frame strongly while fitting the top rest.

STEP 4

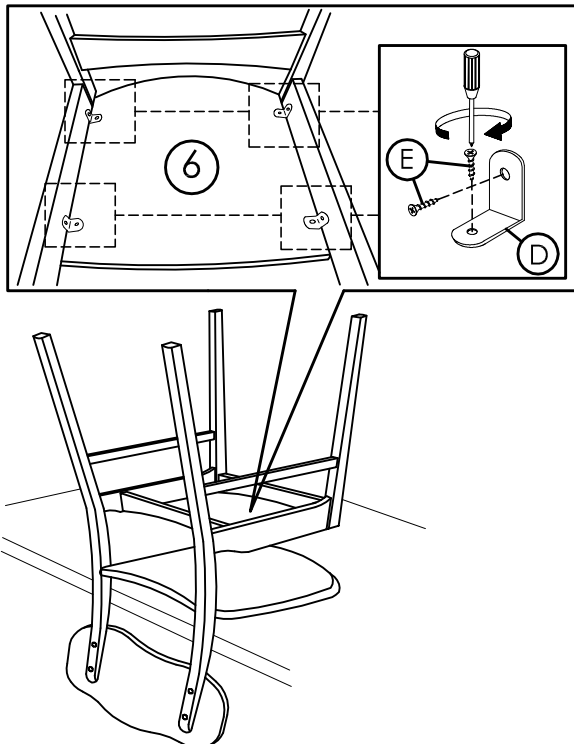

STEP 5

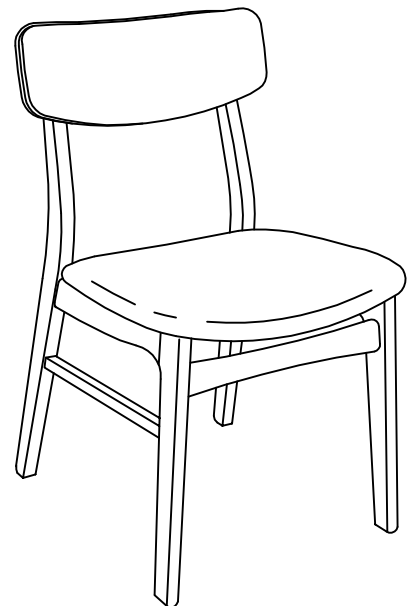

COMPLETED
CHAIR ASSEMBLY.